Trouble Shooting: Power Tower Failure to activate motor
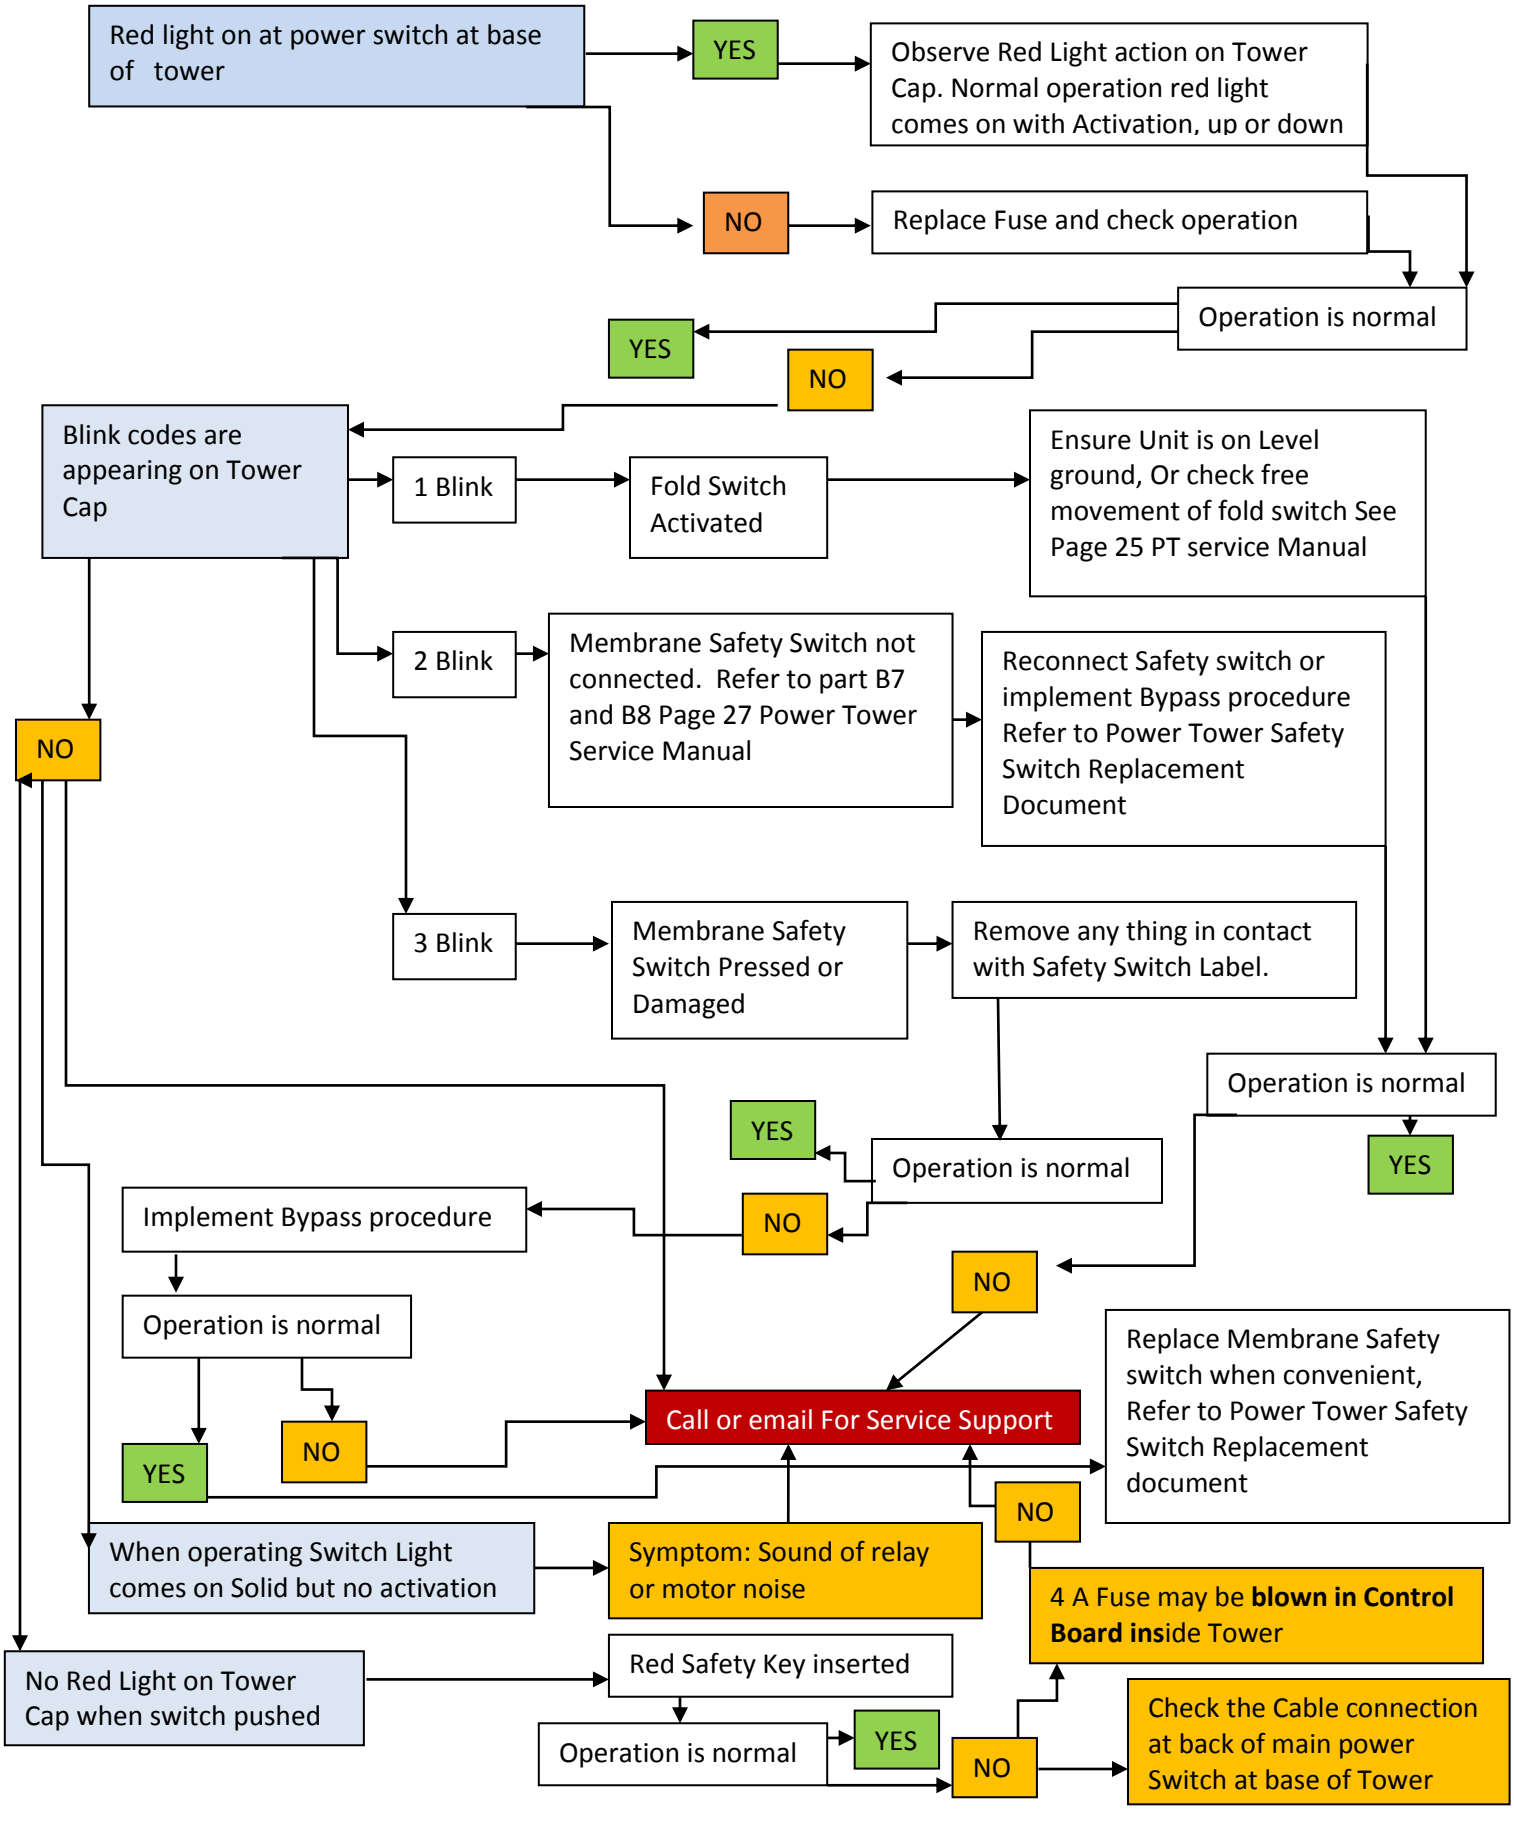
The Power Tower must be unfolded with the Red Safety Key inserted before it will operate. A fold switch is in the right foot of the tower to insure the bottom plyo strut has unfolded. See Page 25 PT service manual to test this switch.